

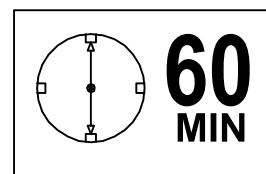


Wohnzimmer


Benton	00030029/20
Camron	00030001/01
Laurey	00030027/01

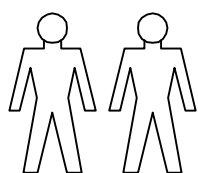

R

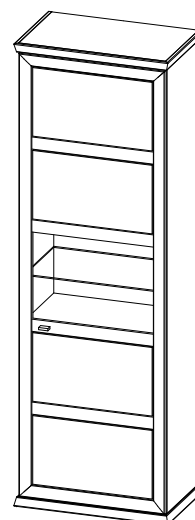




L

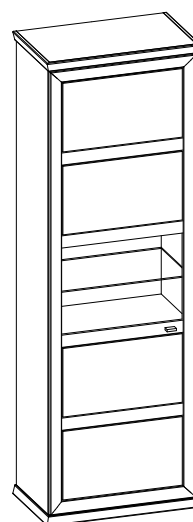





2092 mm






696 mm



430 mm

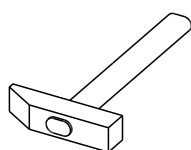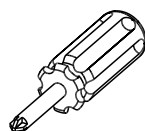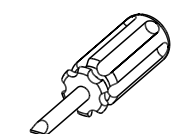


05
08

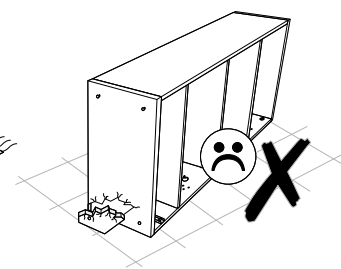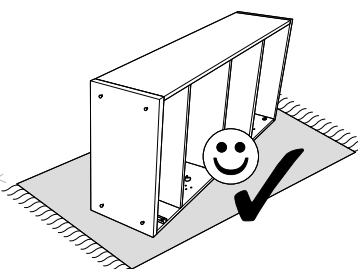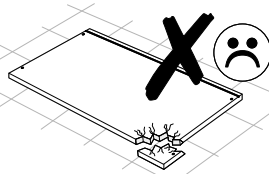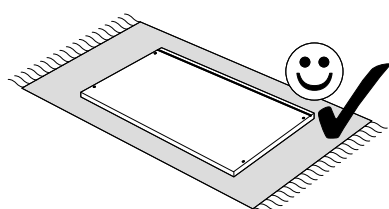


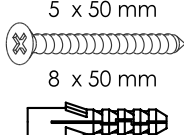
B3 d8  x1	C0  x16	C2  x16
D0 3 x 15 mm  x28	D10 4 x 16 mm  x8	D21 5 x 13 mm  x1
E0 5 x 50 mm 8 x 50 mm  x1	H2 4 x 22 mm  x2	J3  x4
J10  x4	L6  x1	M1  x28
P0  x1	Q1  x4	Q3  x8
U2  x4	U3*  x2 *MODEL CAMRON	

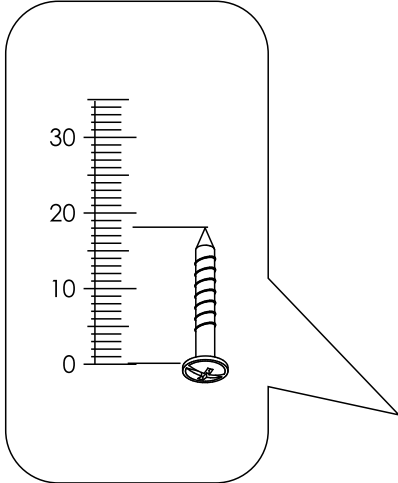

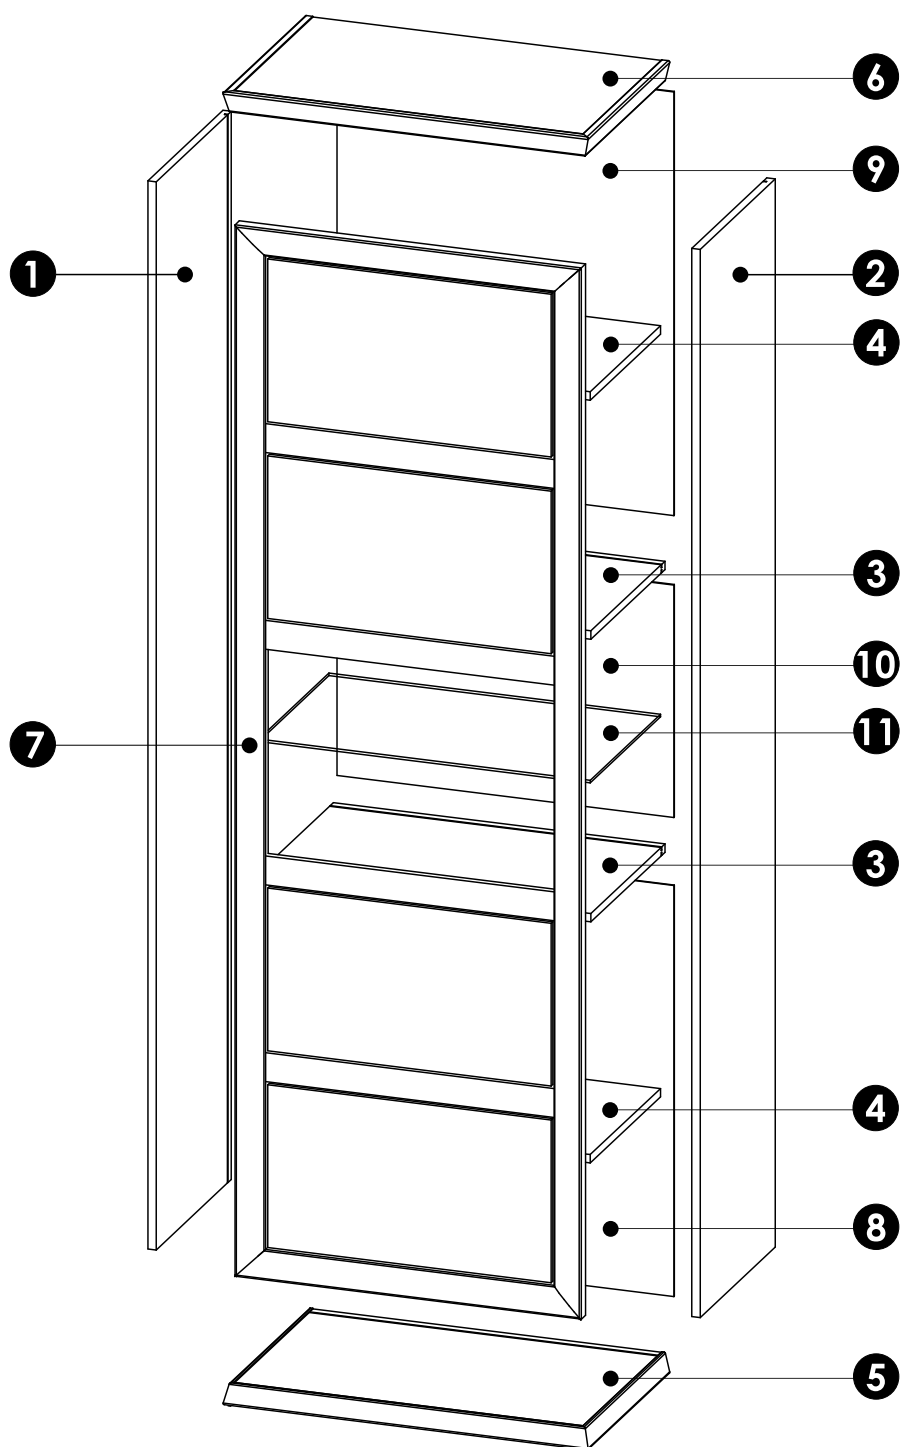




1	2036	393	16	x1	1/10
2	2036	393	16	x1	1/10
3	632	388	16	x2	1/10
4	632	368	16	x2	1/10
5	696	430	40	x1	2/10
6	696	430	40	x1	2/10
7	2004	660	25	x1	3/10
8	642	786	2,8	x1	3/10
9	642	804	2,8	x1	3/10
10	642	443	2,8	x1	3/10
11	631	358	5	x1	1/10
					1/10

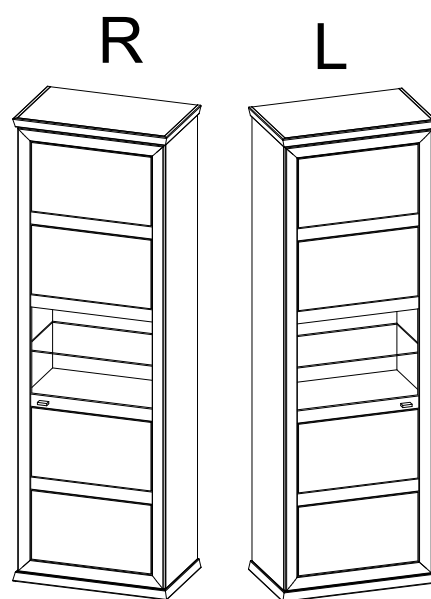


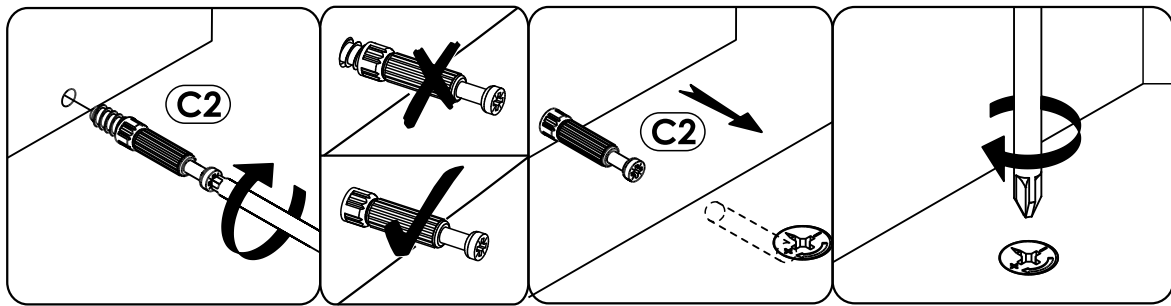




1 ►

C2 	x4	D21 5 x 13 mm 	x1	P0 	x1
--	-----------	--	-----------	--	-----------

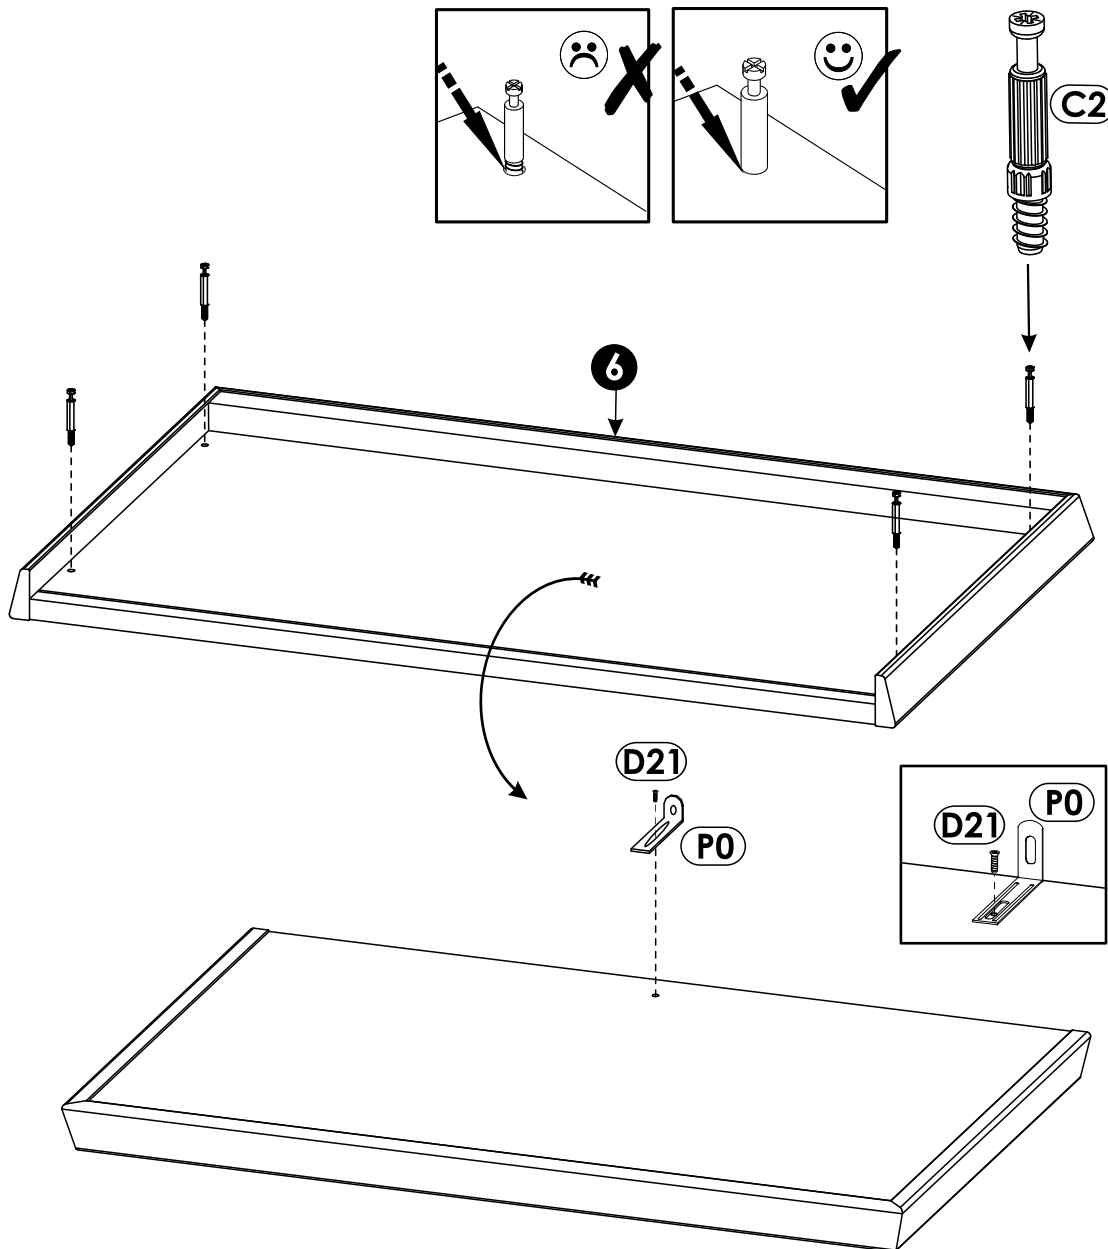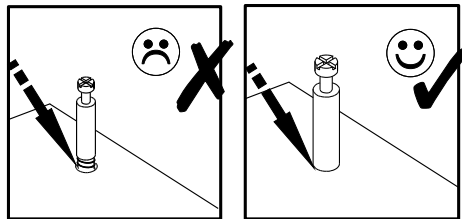


2▶

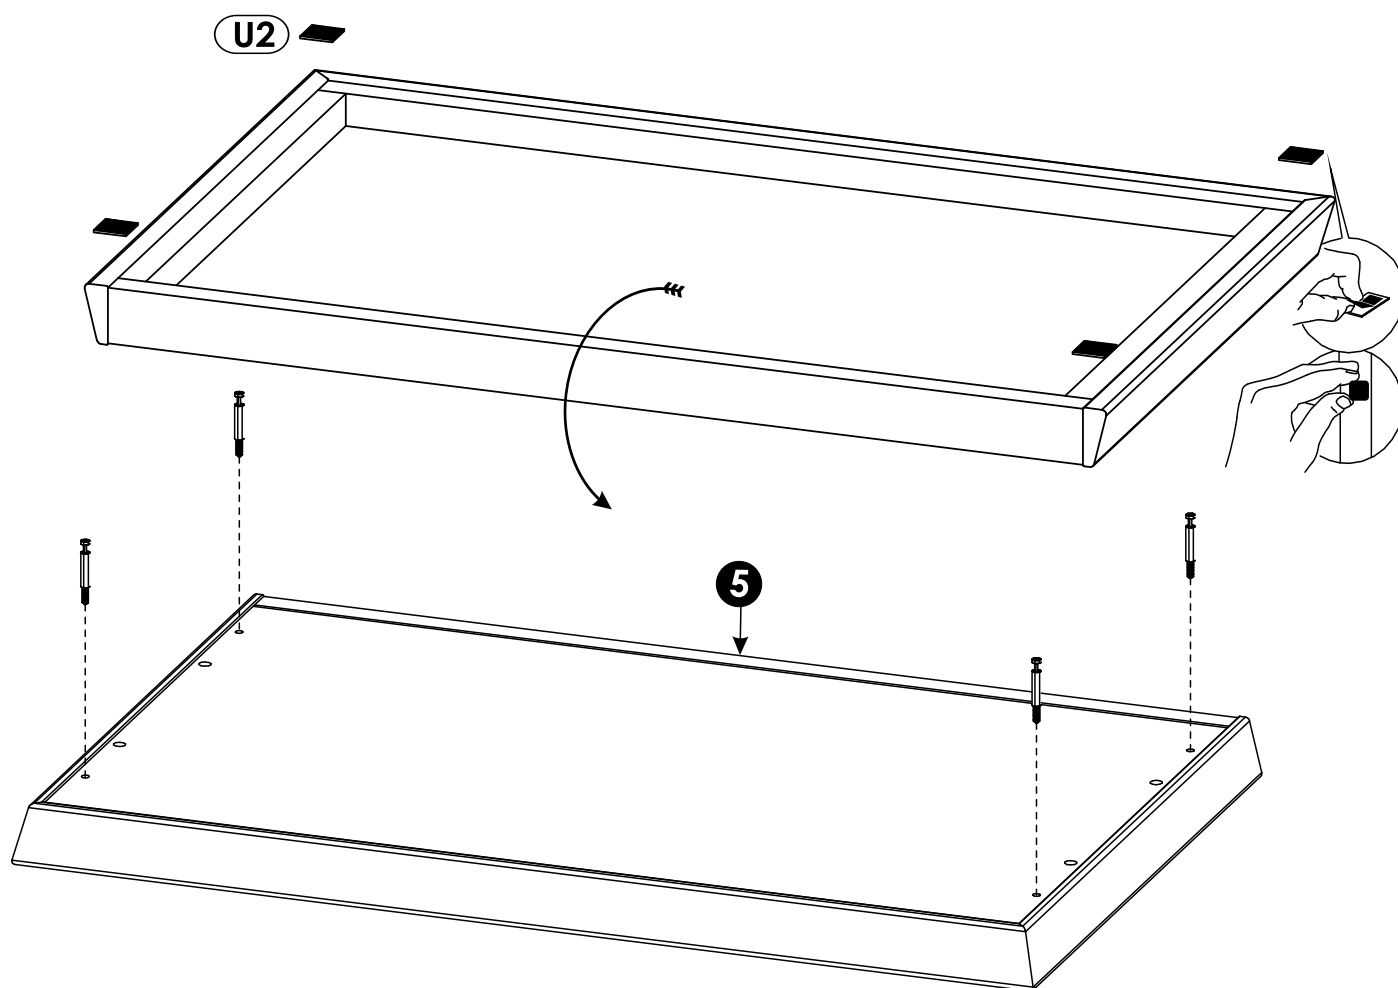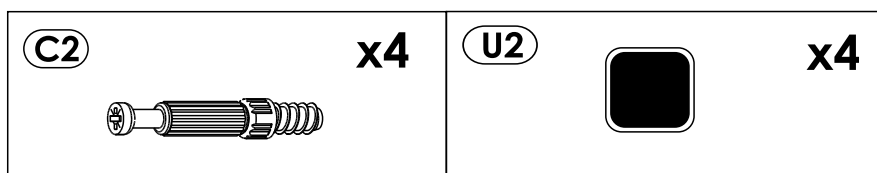


C2  x8	J3  x4	Q1  x4
	Q3  x8	



3R▶

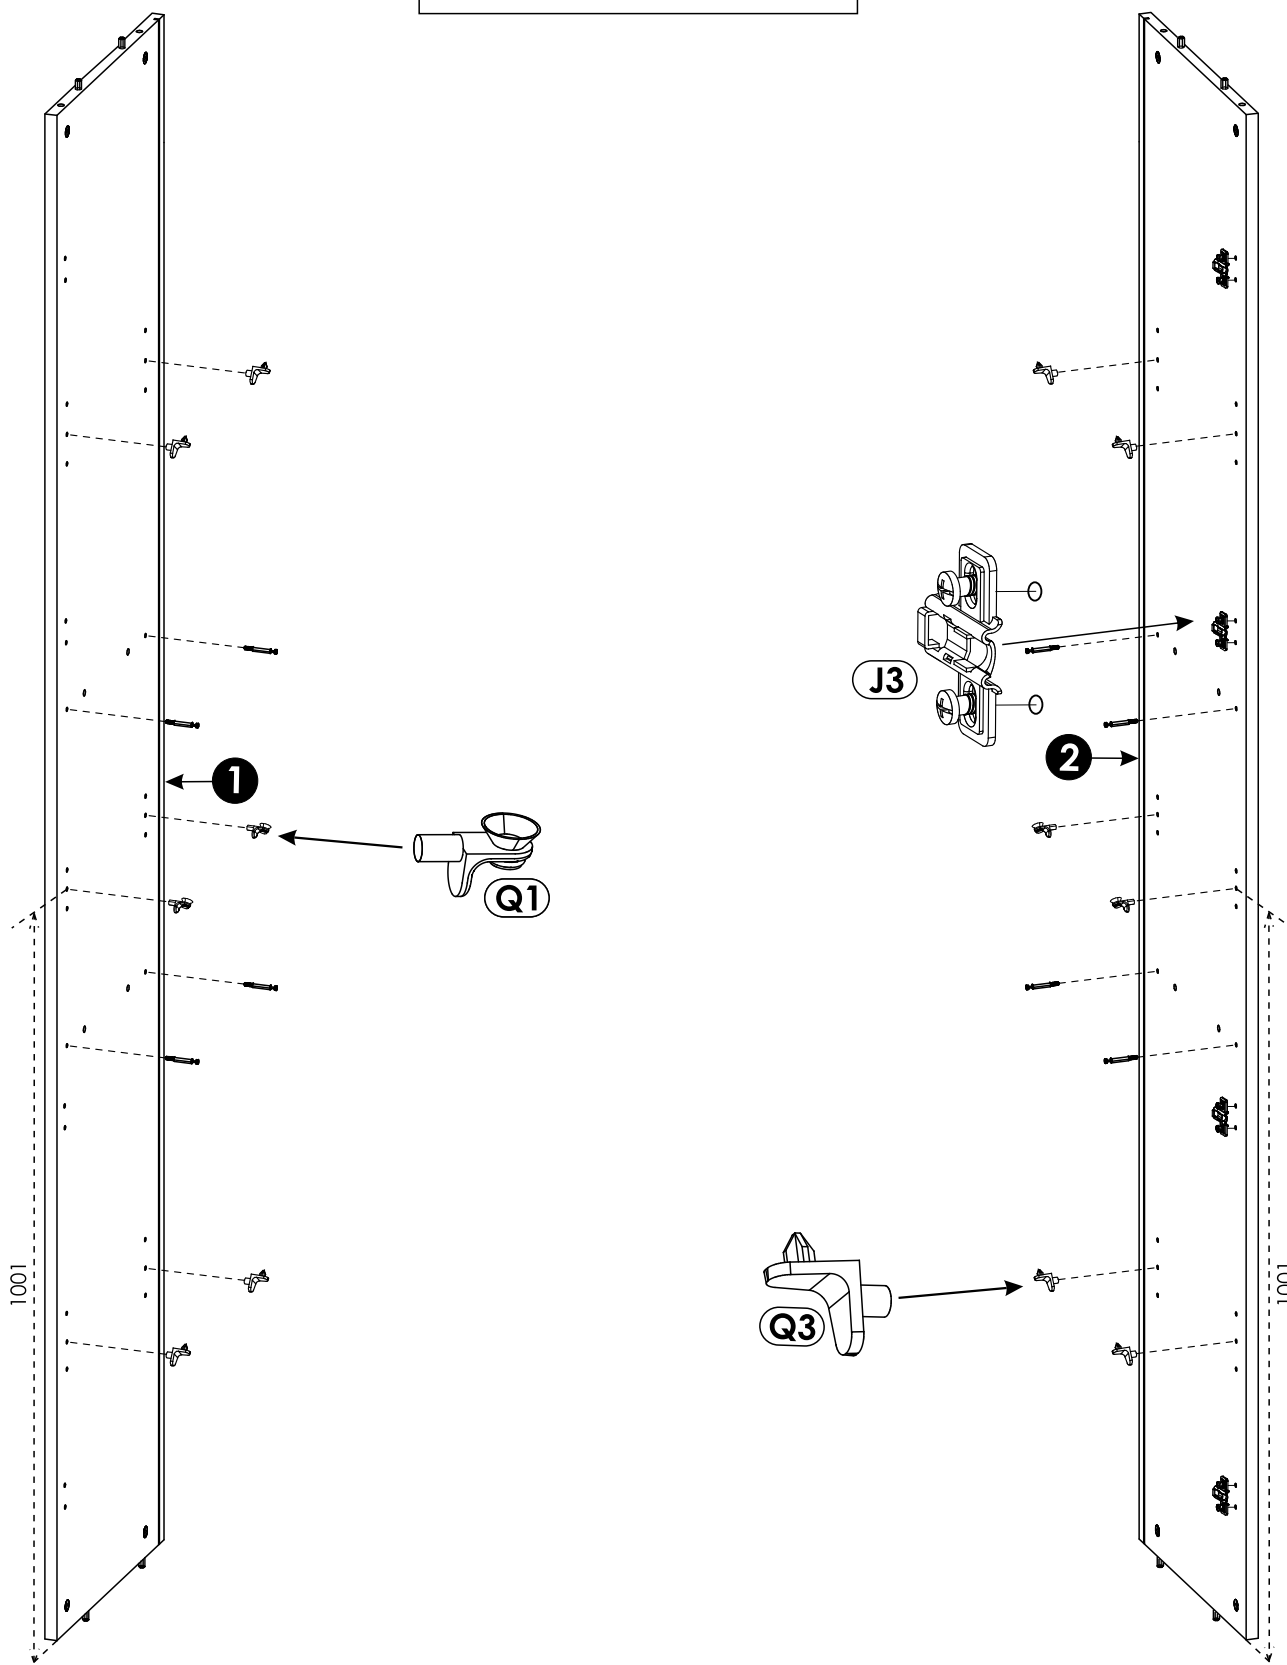



4R▶

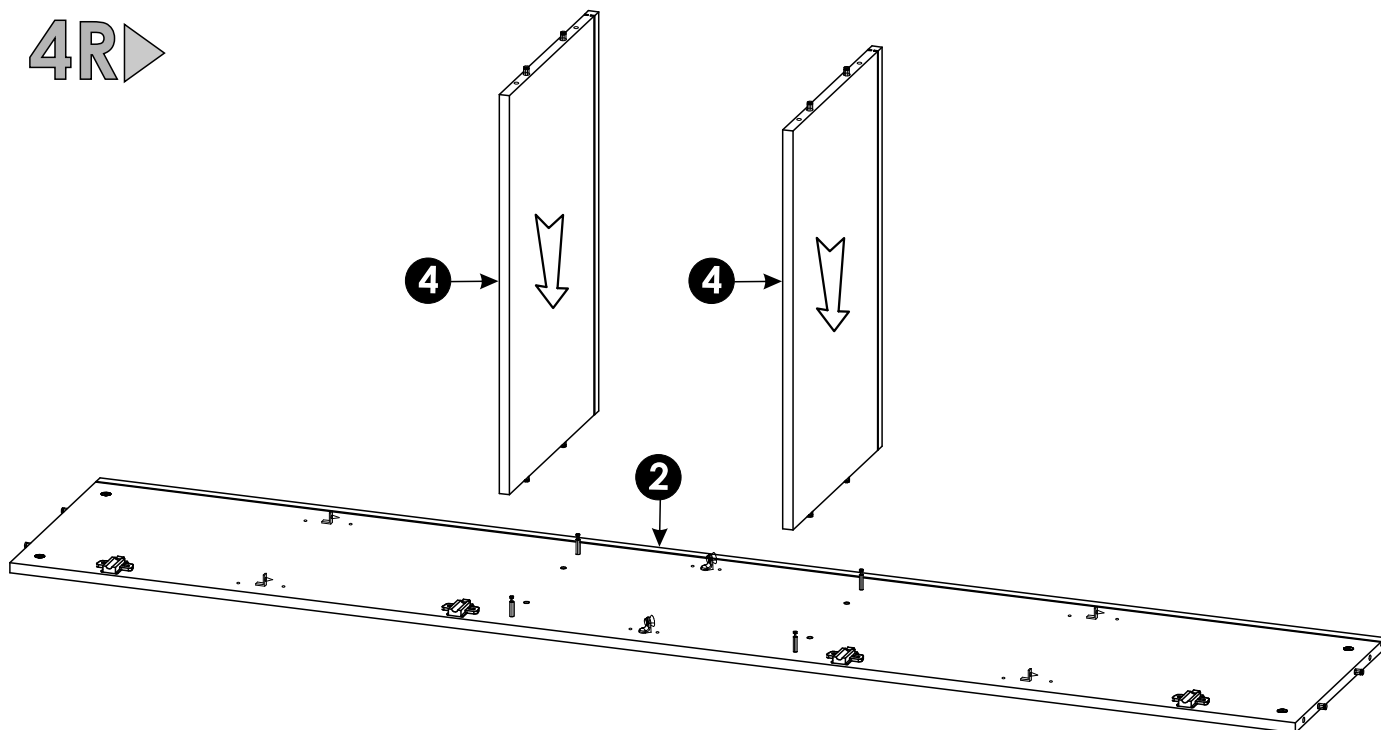


5R▶

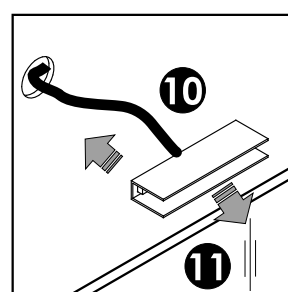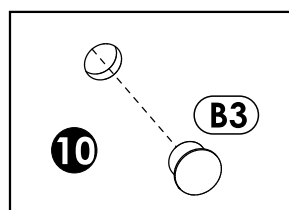

OPTION



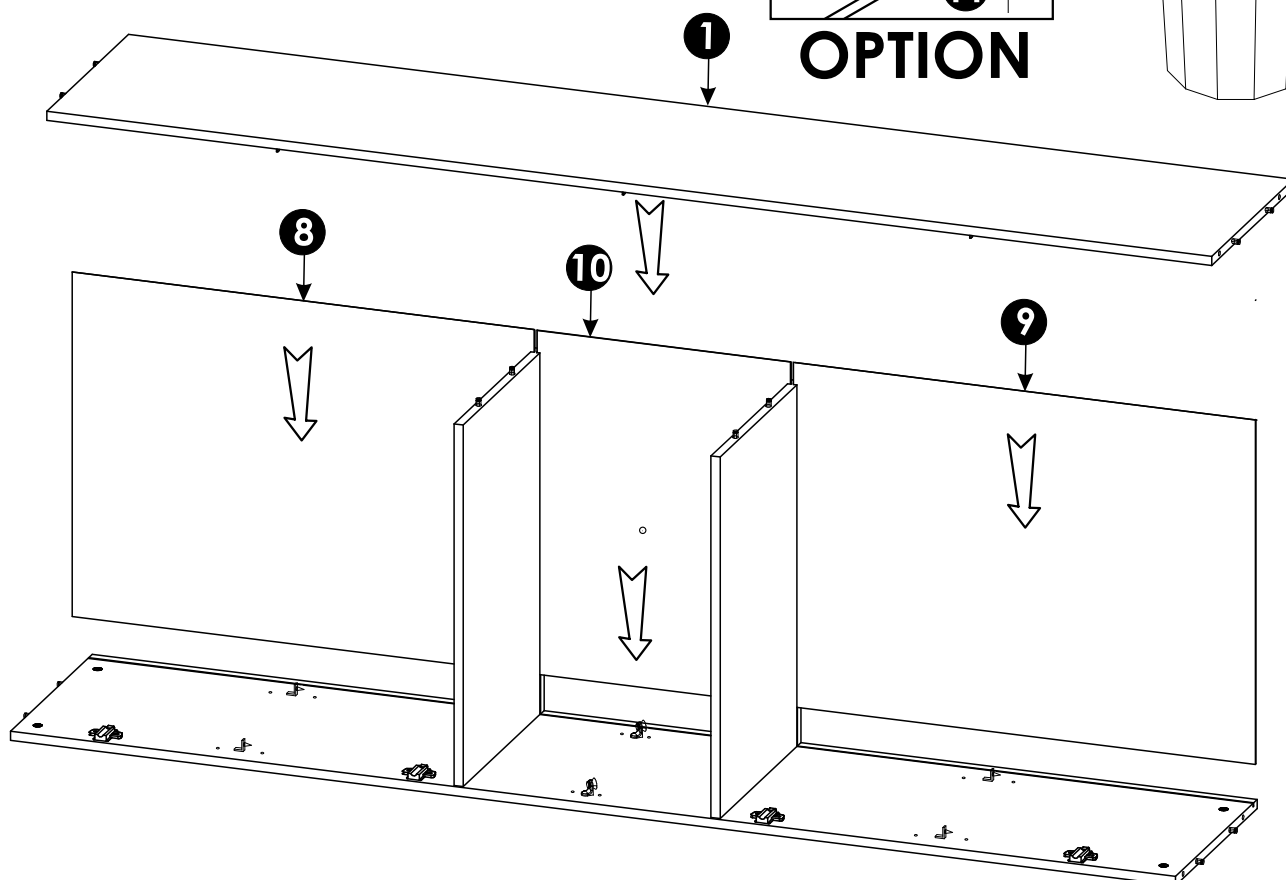
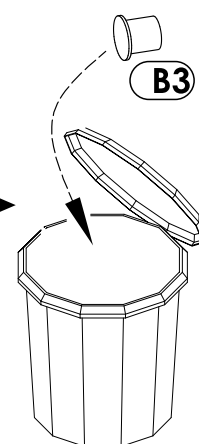


6R▶





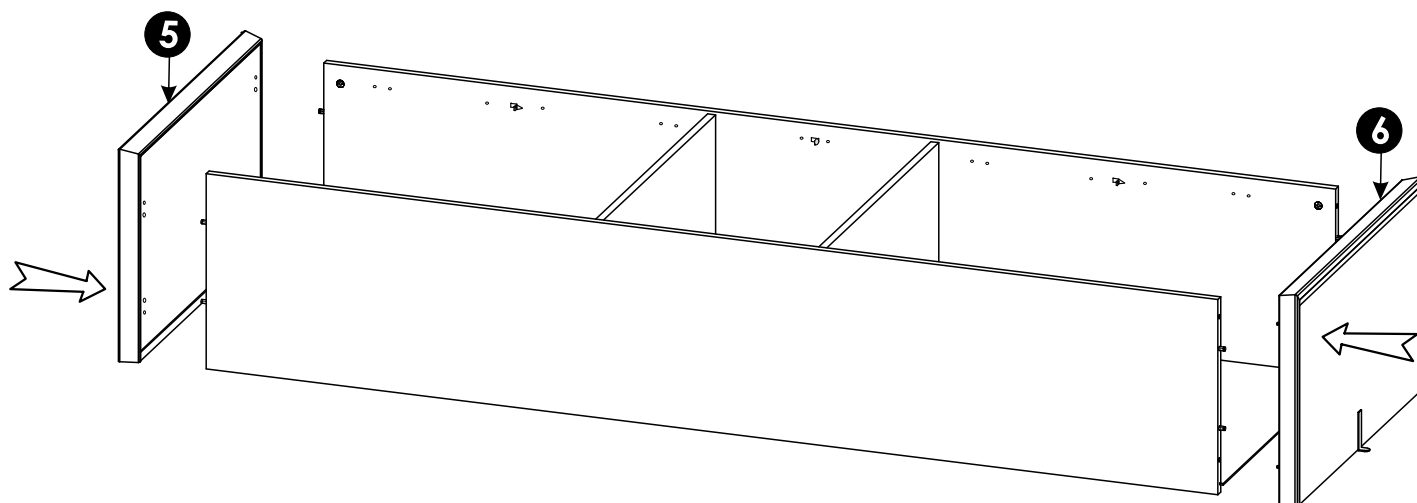


7▶




(D0)	3 x 15 mm	x28
		
(M1)		x28
		

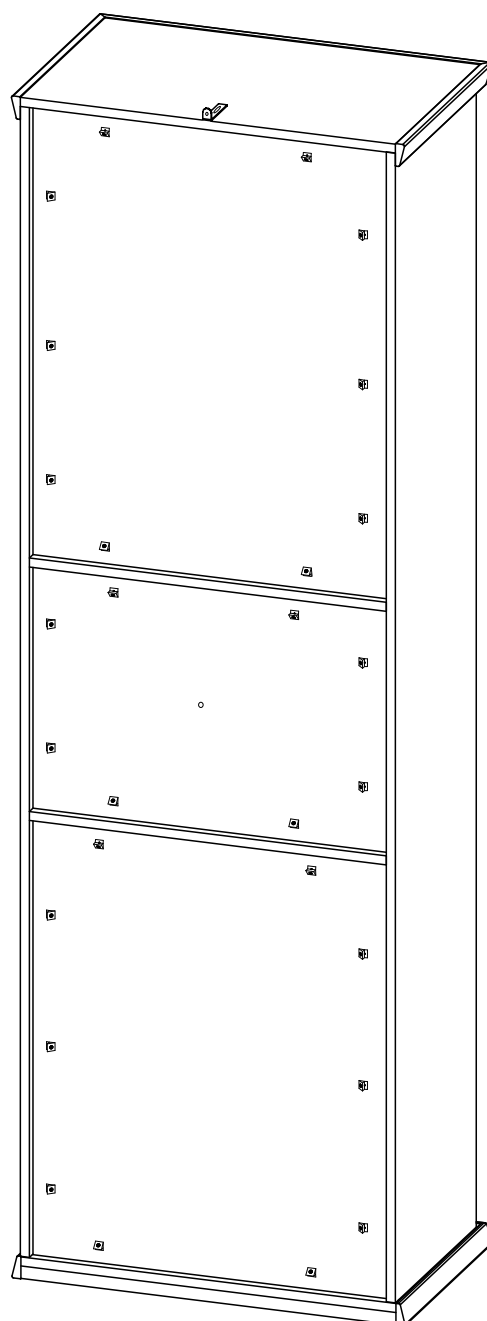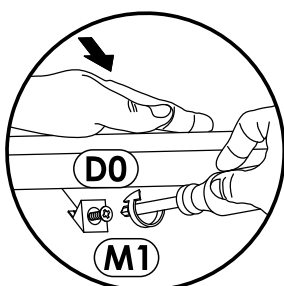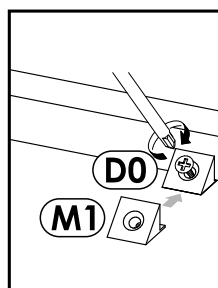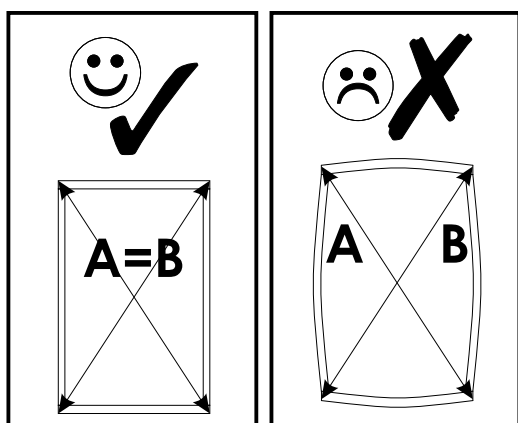





8 ▶

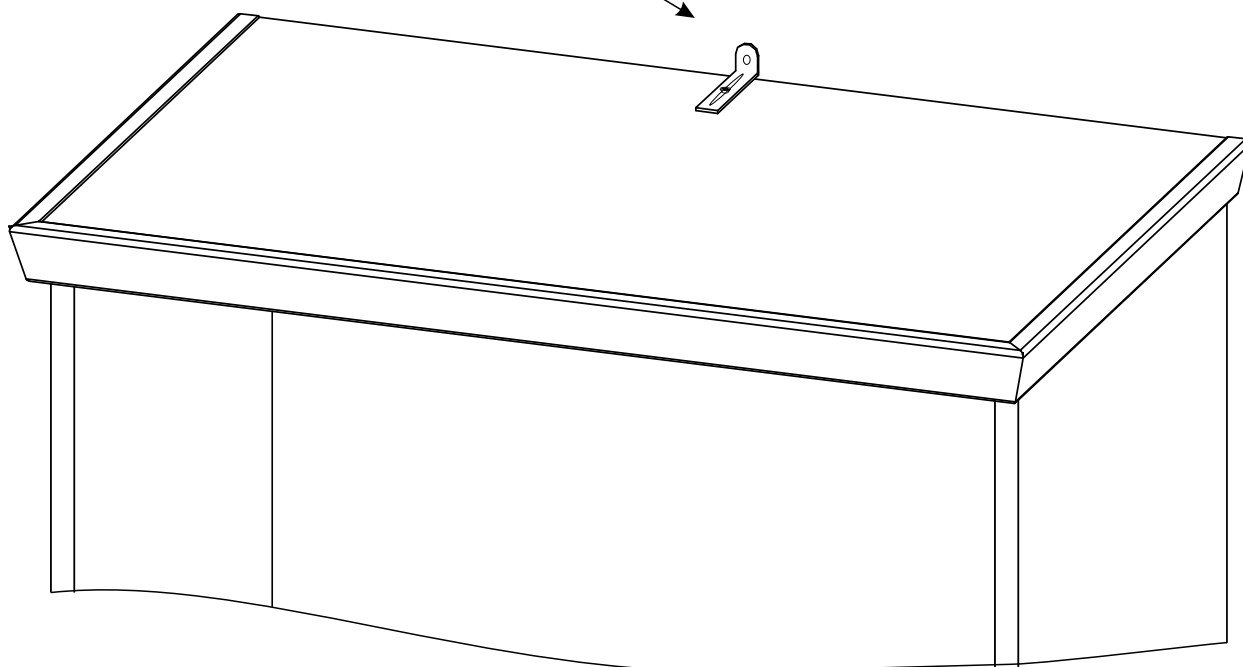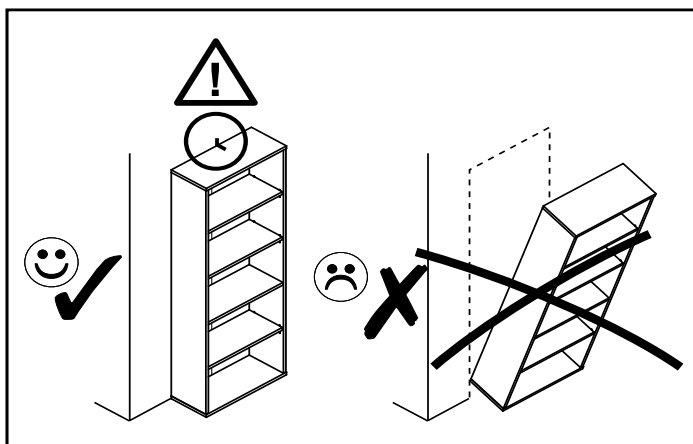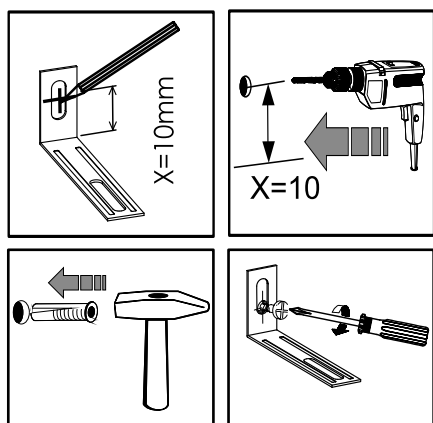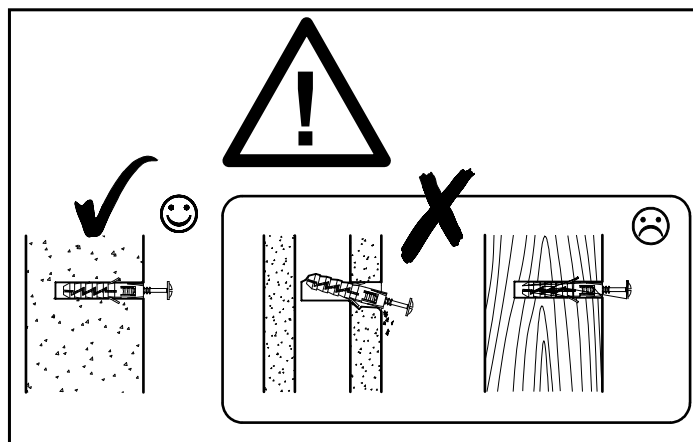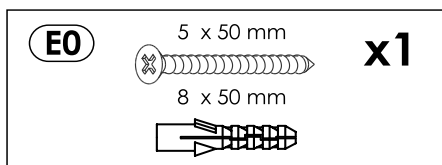

9 ▶

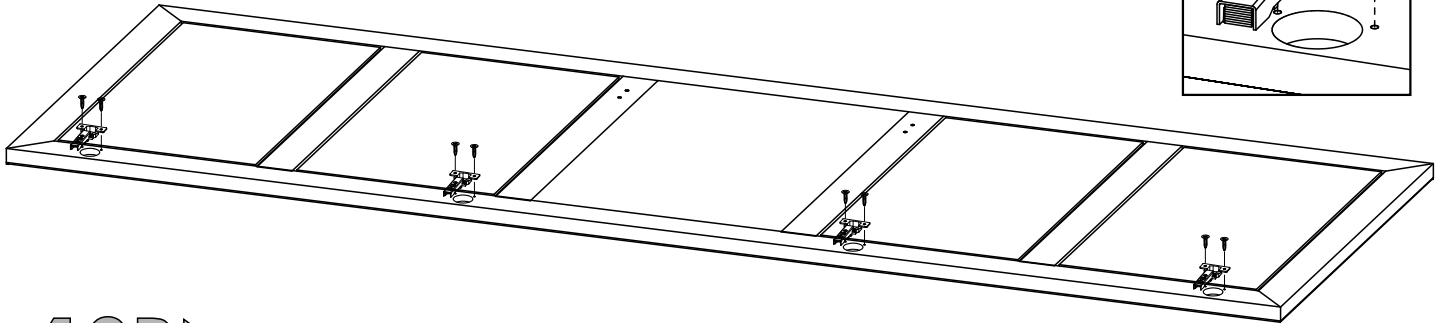
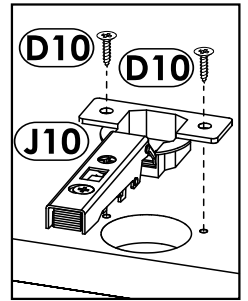
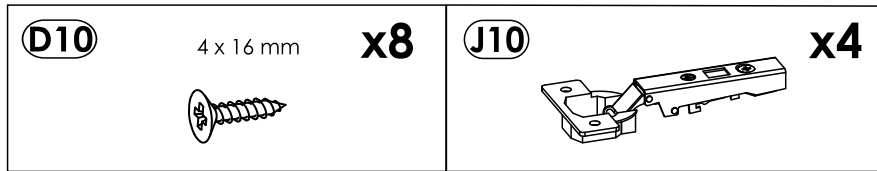




10R ▶

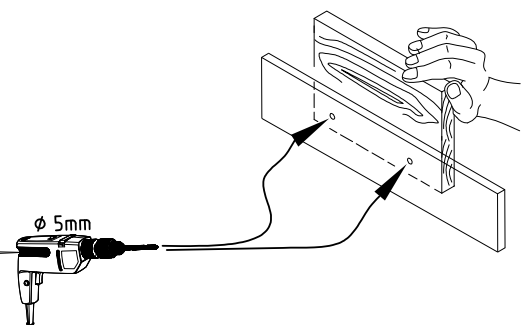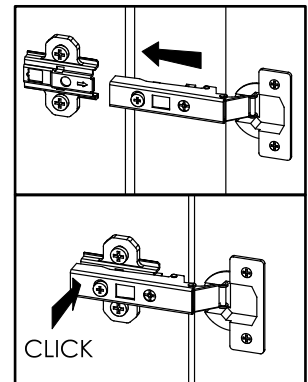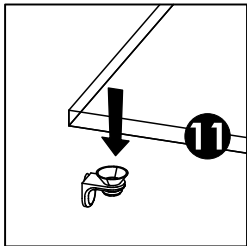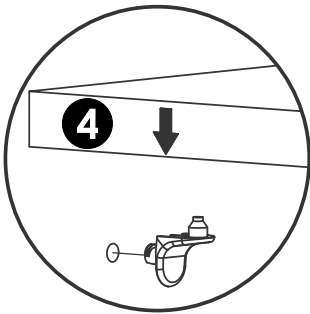


11R▶

C0  x16	H2  x2
L6  x1	U3*  x2 *MODEL CAMRON

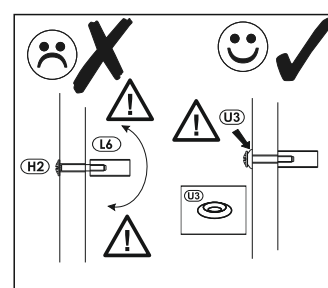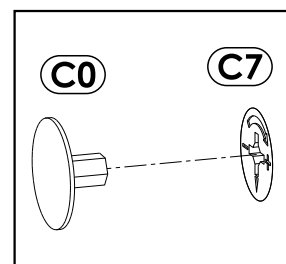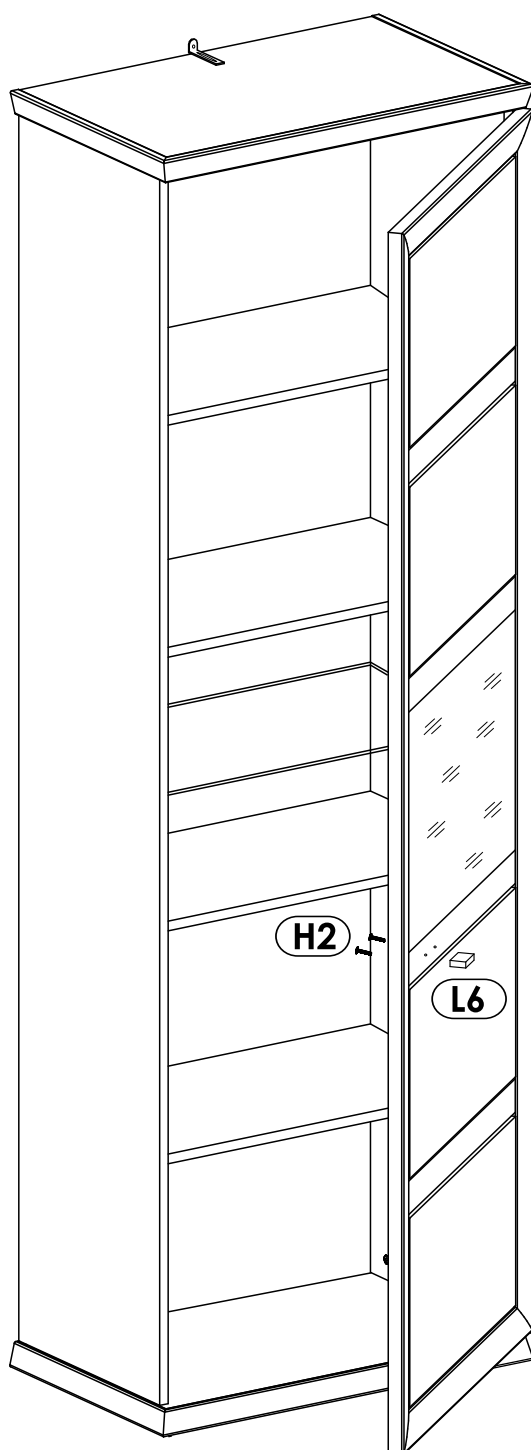


C2  x8	J3  x4	Q1  x4
	Q3  x8	



3L ►

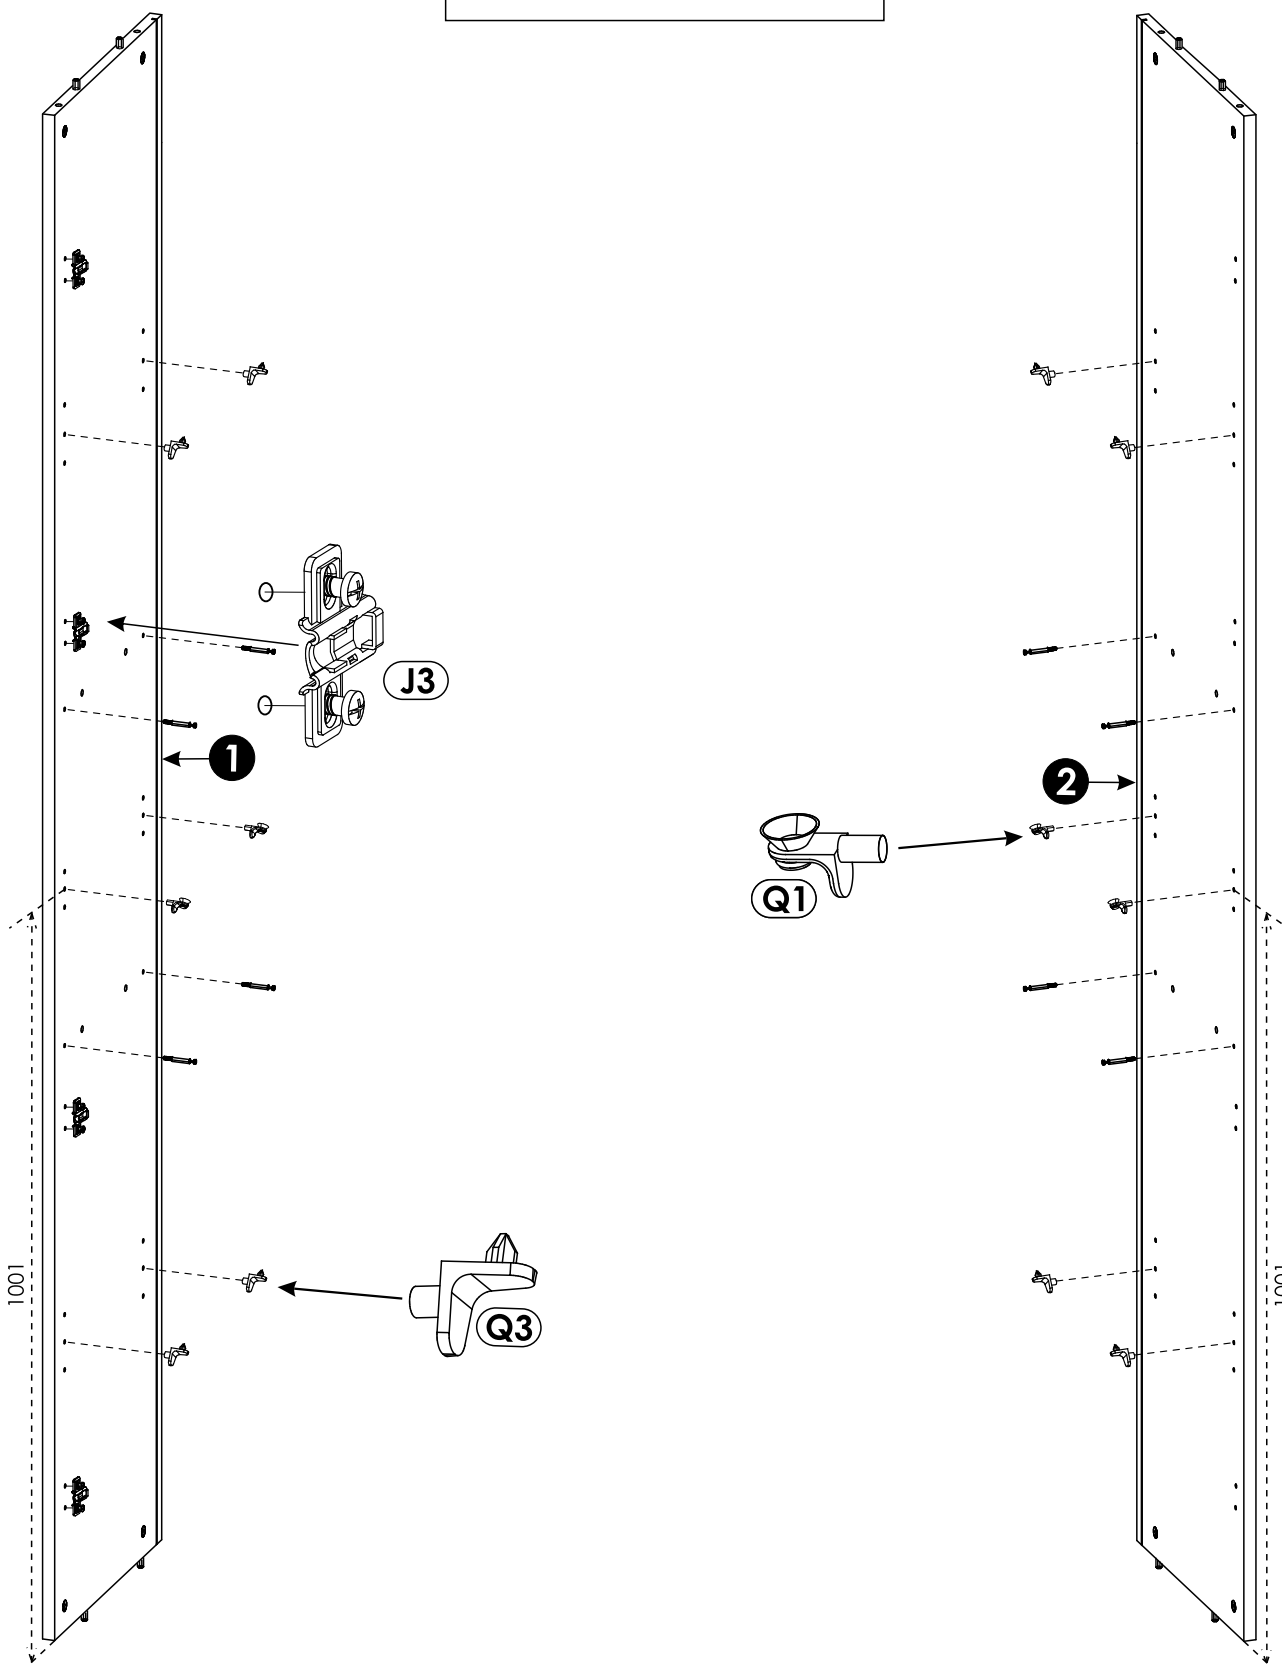



4L ▶

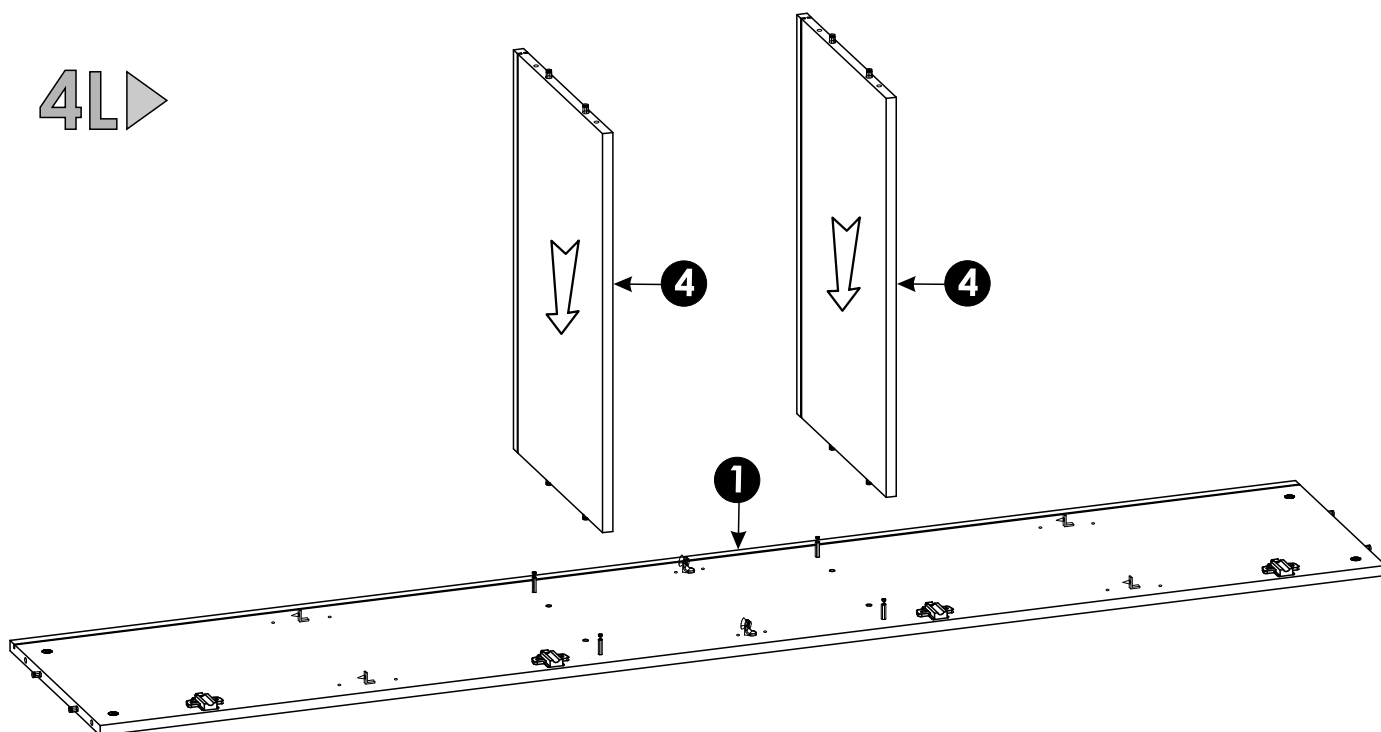





5L ▶

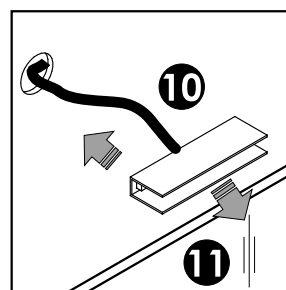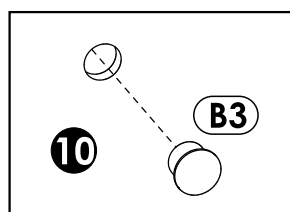


OPTION

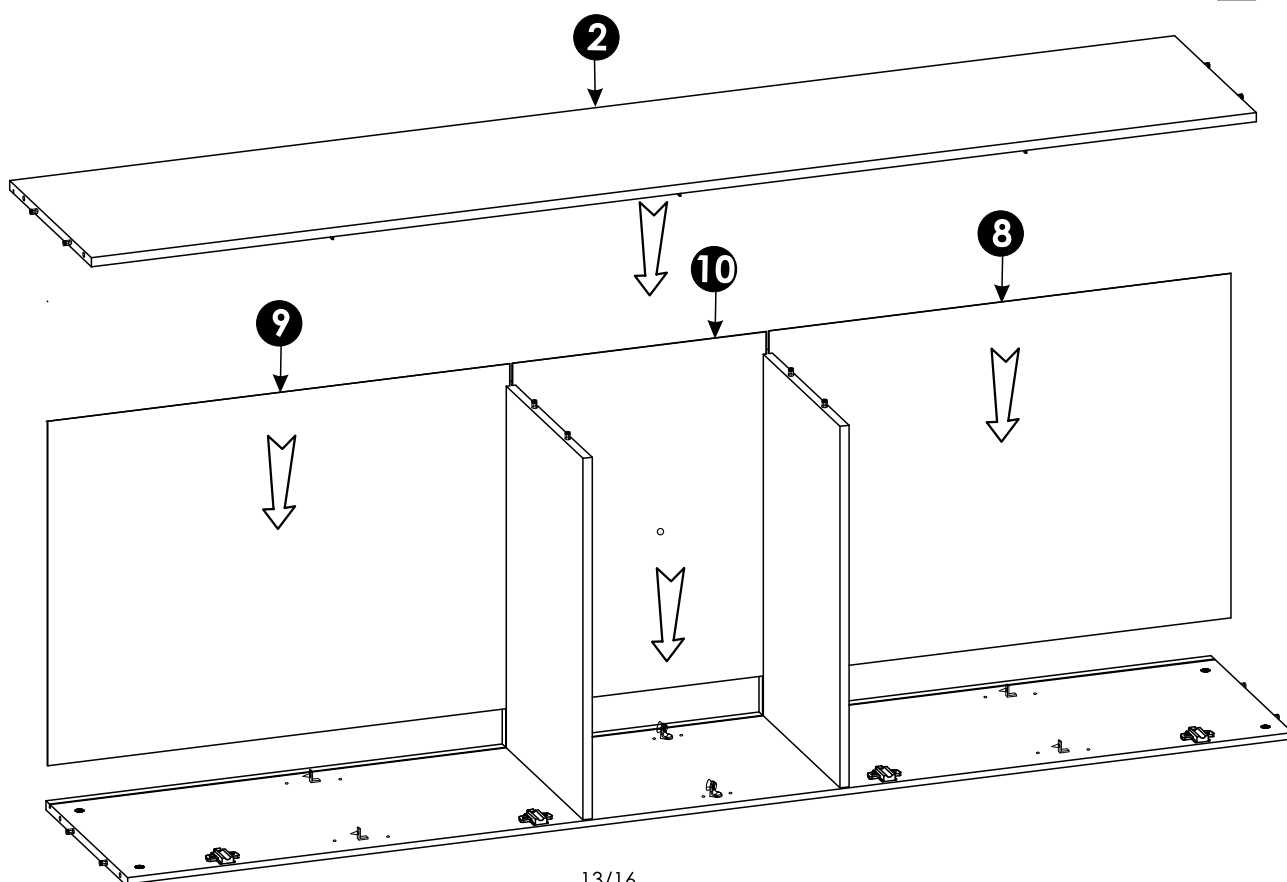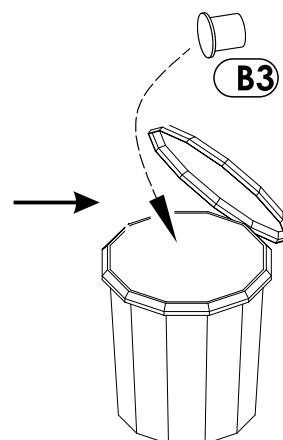

This diagram illustrates the final assembly step. It shows the main frame of the storage unit with two side panels, labeled 5 and 6, being attached. Panel 6 is shown on the left, and panel 5 is shown on the right. Arrows indicate the direction of movement for each panel as they are slid into place. The panels are designed to fit snugly against the frame, completing the enclosure.

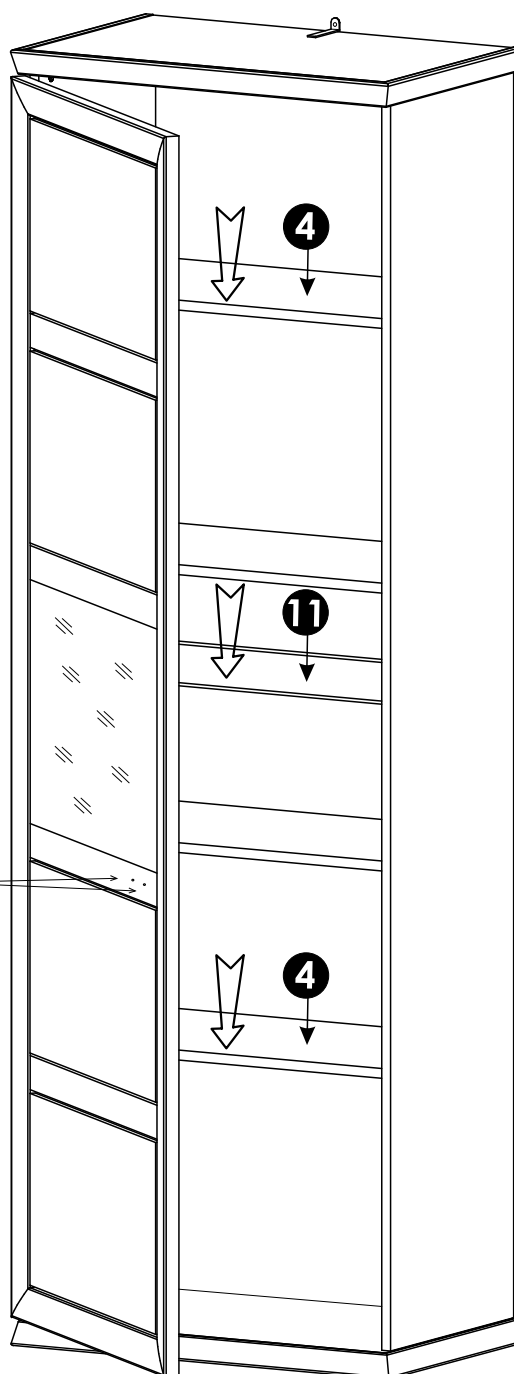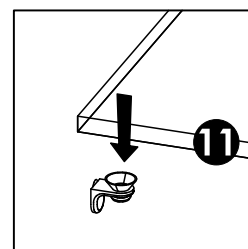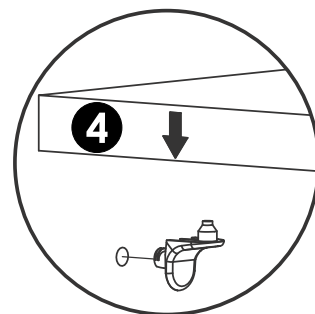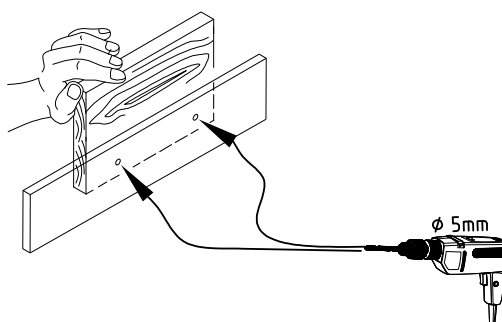

11L ▶

C0  x16	H2  x2
L6  x1	U3*  x2 *MODEL CAMRON

